


# How to configure a Counter top

 [cadimage.zendesk.com/hc/en-us/articles/205216066-How-to-configure-a-Counter-top](https://cadimage.zendesk.com/hc/en-us/articles/205216066-How-to-configure-a-Counter-top)

When setting up the Counter/Bench Top for a Cadimage Cabinet, you'll find that there are three parts that make up the top. These parts are:


In this article we will show you how to modify the [Surfaces](#) for each of these three parts, as well as apply surfaces to each.

All Counter top settings are accessed under the **Counter** options area of the **Cabinets Settings dialogue**:

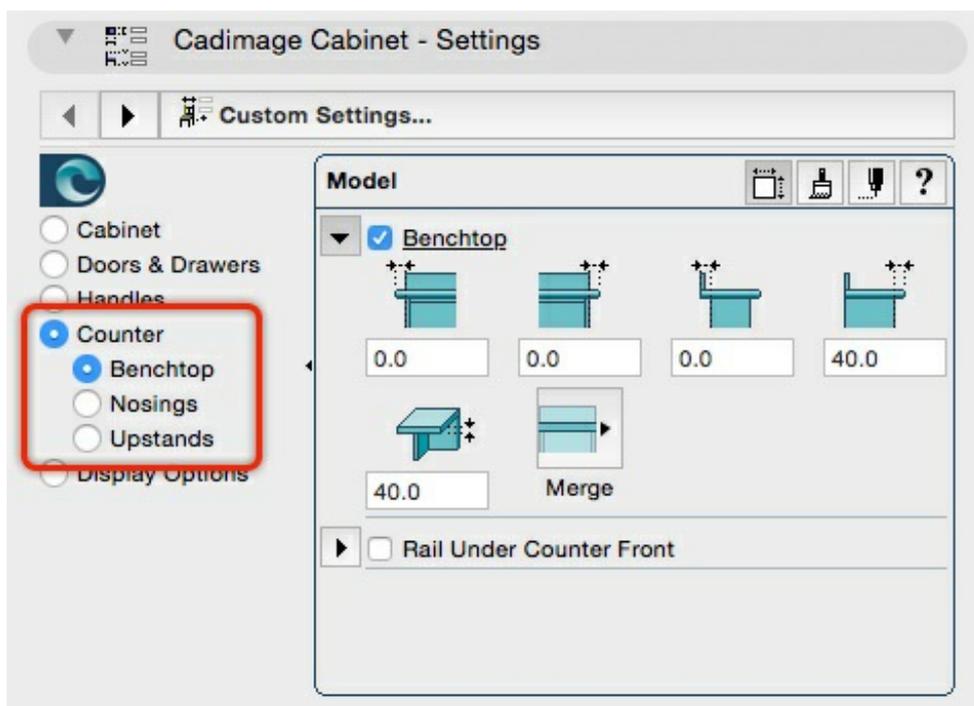

Configure the Benchtop

Here are the options available for configuring your Benchtop:

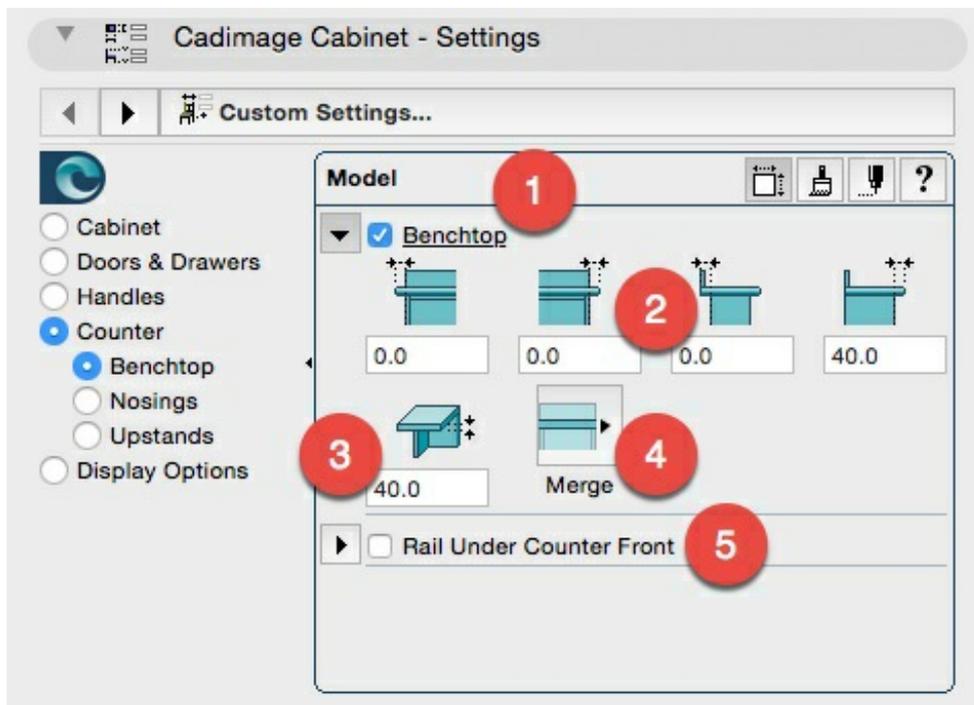


1. Switch the benchtop **on** or **off**
2. The benchtop **offsets** to the sides, rear and front of the cabinet carcass
3. The **thickness** of the benchtop
4. Define how the benchtop **merges** with adjacent cabinets using the following options:
5. Choose if a Rail is present under the benchtop. This option allows you to turn the **Rail on** or **off** and by expanding the twirl down you can configure the size.





## Nosing Options

The options allowing you to configure and control the Nosings are:

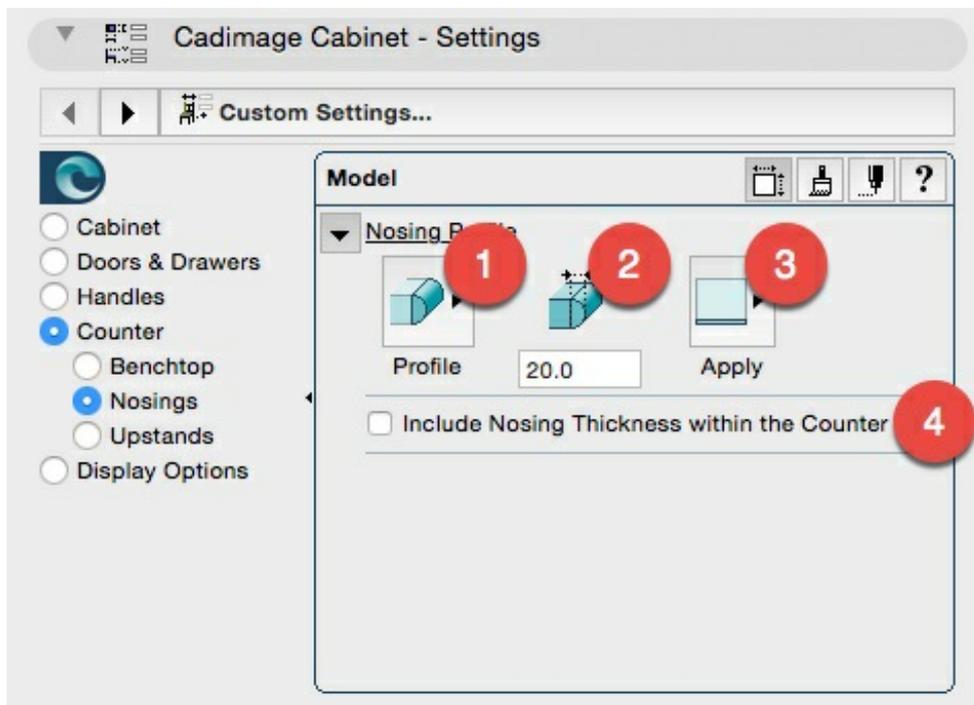


1. The **Profile** of the nosing which can set as follows:
2. The **Thickness** of the nosing
3. The **Edges** to which the nosing can be applied which can be set as follows:
4. The option to Include Nosing Thickness within the Counter.

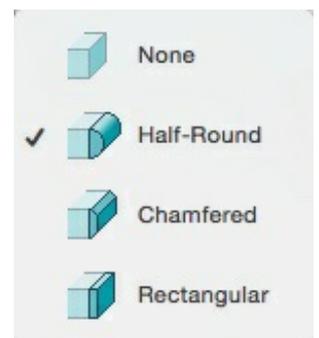

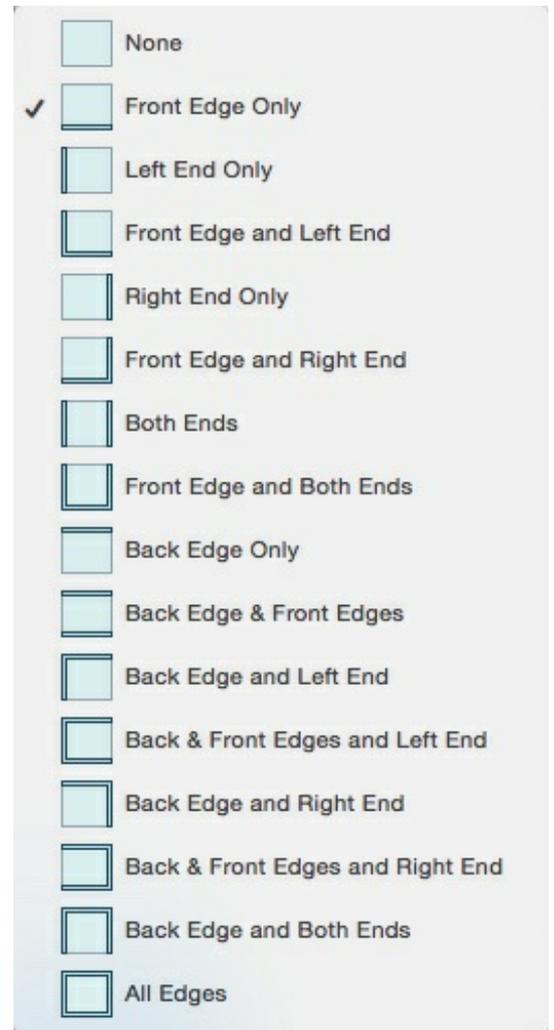



## Configure the Upstands

The options allowing you to configure and control the Upstands are:

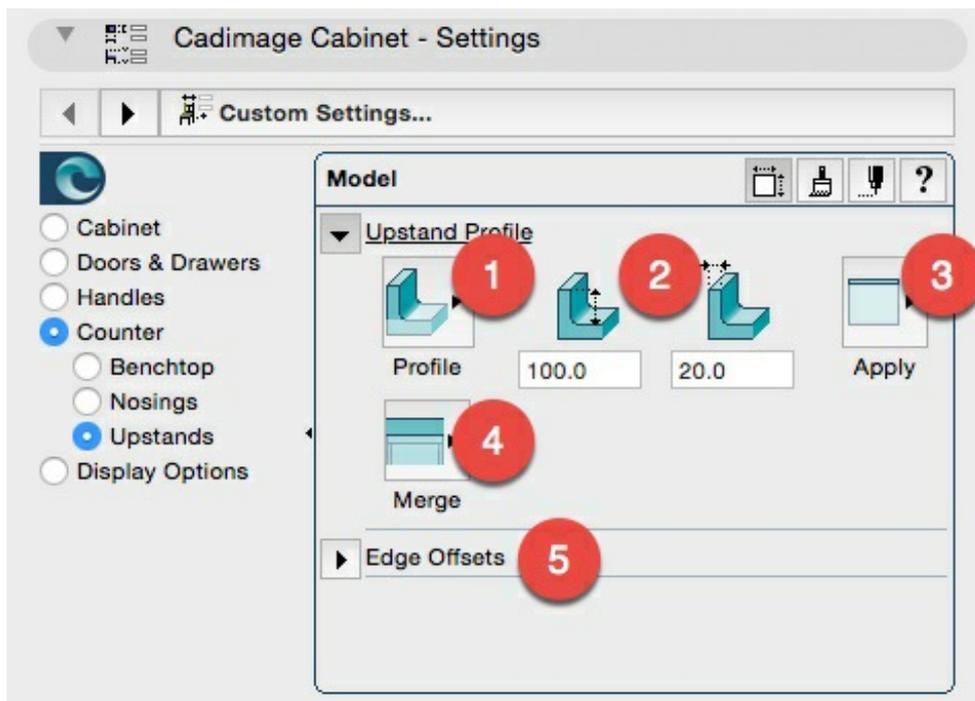


1. The **Profile** of the upstand which can be set for either **Rectangular** or **Radiused**

2. The **Height** and **Thickness** of the upstand
3. The **Edges** to which the upstand can be applied which can be set as follows:
4. Define how the upstands **merge** with adjacent cabinets using the following options:
5. The **Edge Offsets** which can be configured as follows:

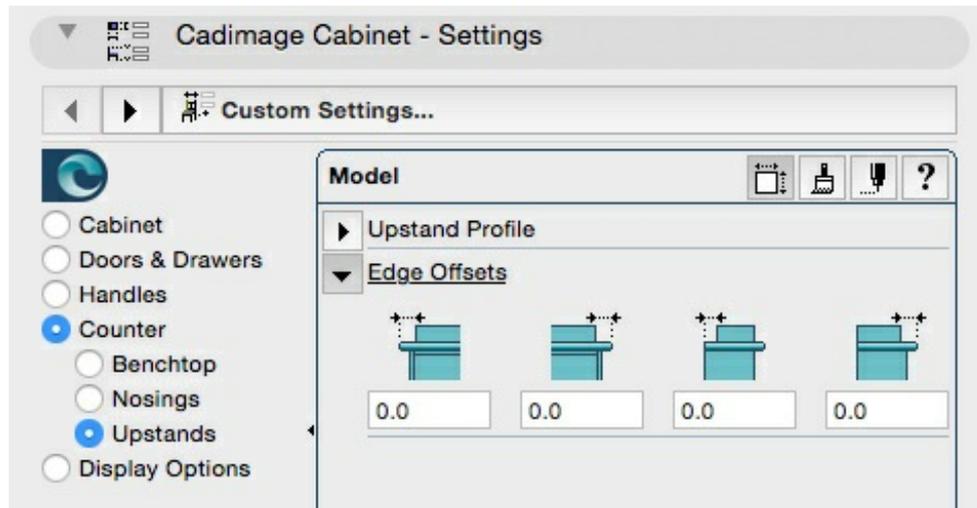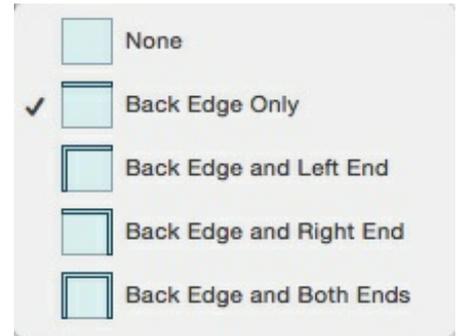

## Change the Surfaces of a Counter

To change the surfaces applied to the different areas of your Counter, choose the **Surfaces icon** from the upper right corner of the Settings dialogue:

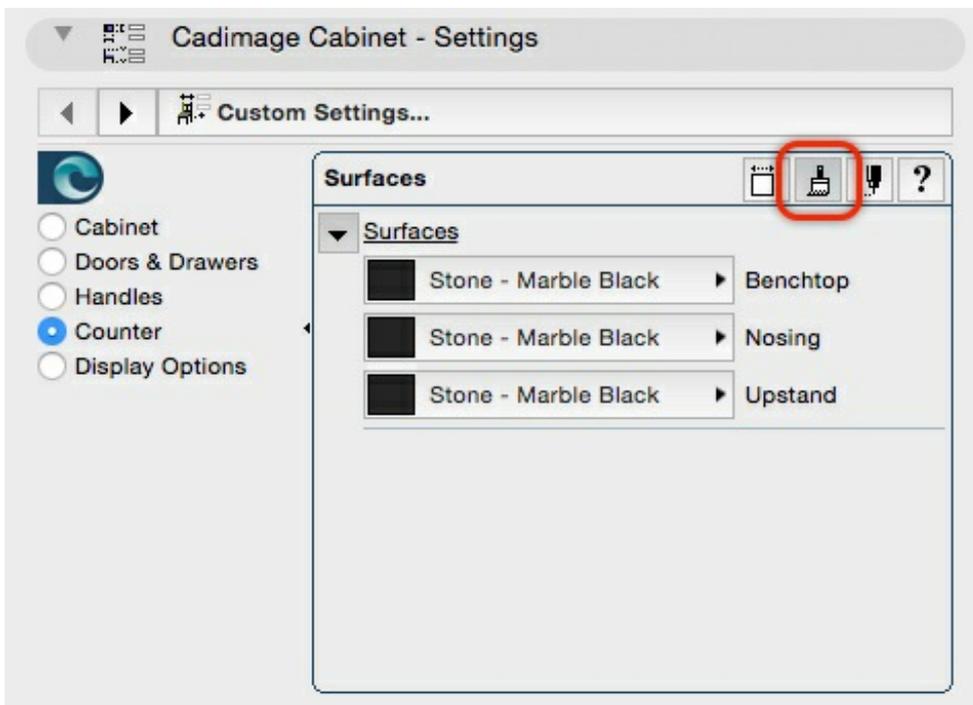

You'll notice that you can no longer see the controls for your Benchtop, Nosings or Upstands - to see these again, click the **Model icon** from the top right of the Settings dialogue:

