


# How to configure Cabinet handles

[cadimage.zendesk.com/hc/en-us/articles/205264303-How-to-configure-Cabinet-handles](https://cadimage.zendesk.com/hc/en-us/articles/205264303-How-to-configure-Cabinet-handles)

You can add or modify your Cabinet handles at any time during the design process. To do this:

1. **Select** an existing **cabinet** (or create a new one)
2. Open the Cadimage Cabinets **Settings dialogue**
3. Choose **Handles** from the menu:

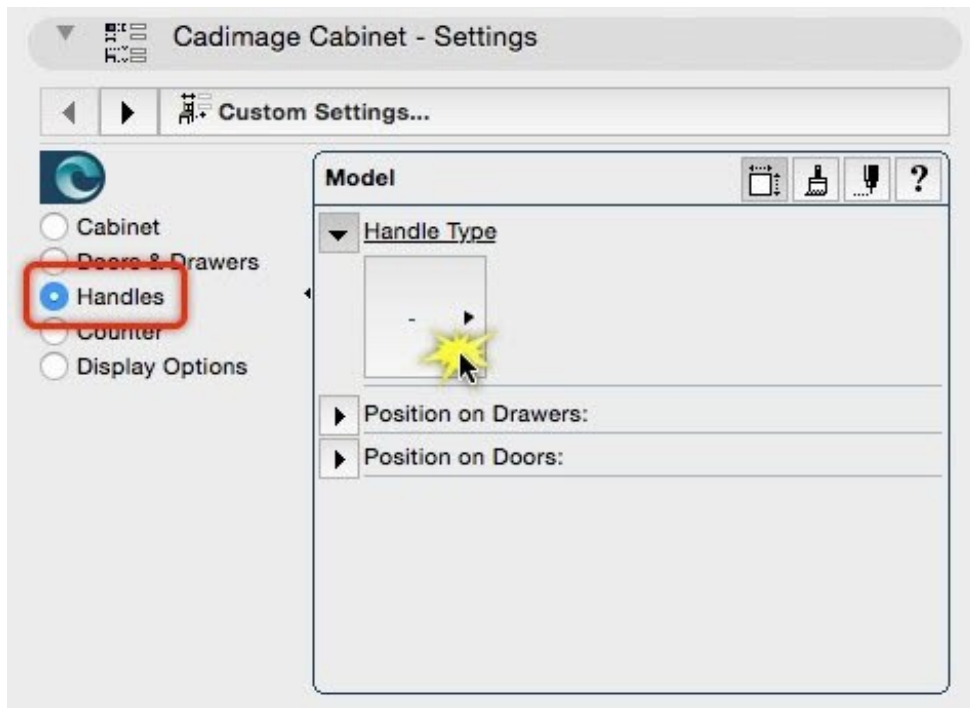


4. **Click** the **Handle Type** button (shown above)
5. Choose from a range of handle designs:


**TIP:** Depending on the handle chosen, you will see a different range of settings to modify its' appearance.

In this example, the **Full Length** handle has been chosen

6. **Configure your handle** as shown below:

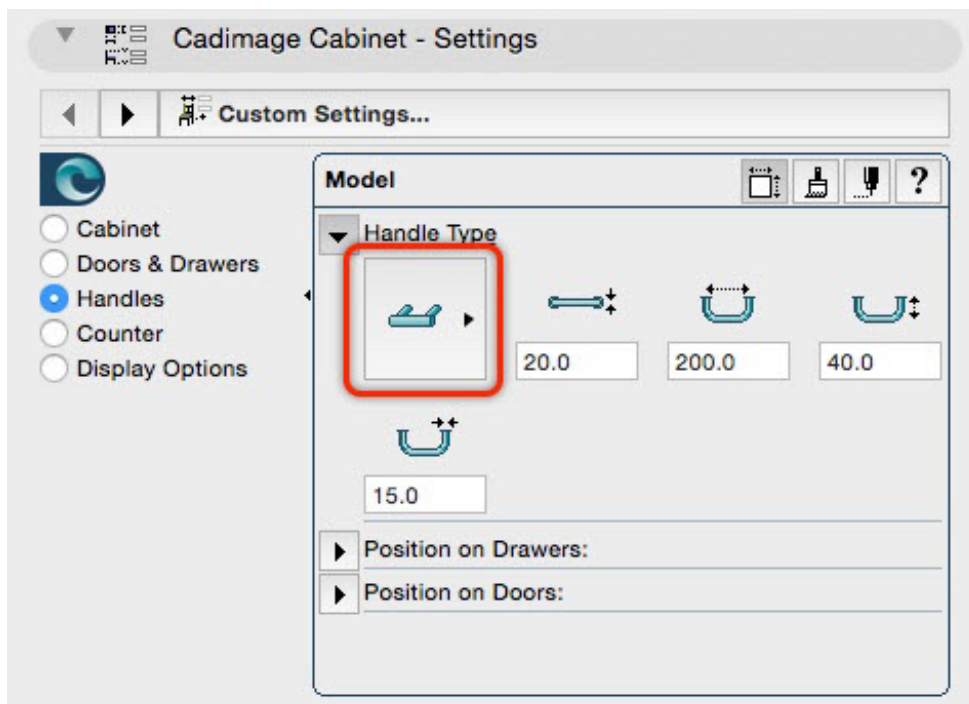

7. Go to the '**Position on Drawers**' twirl-down item to change the position of the handle on your door/drawer:

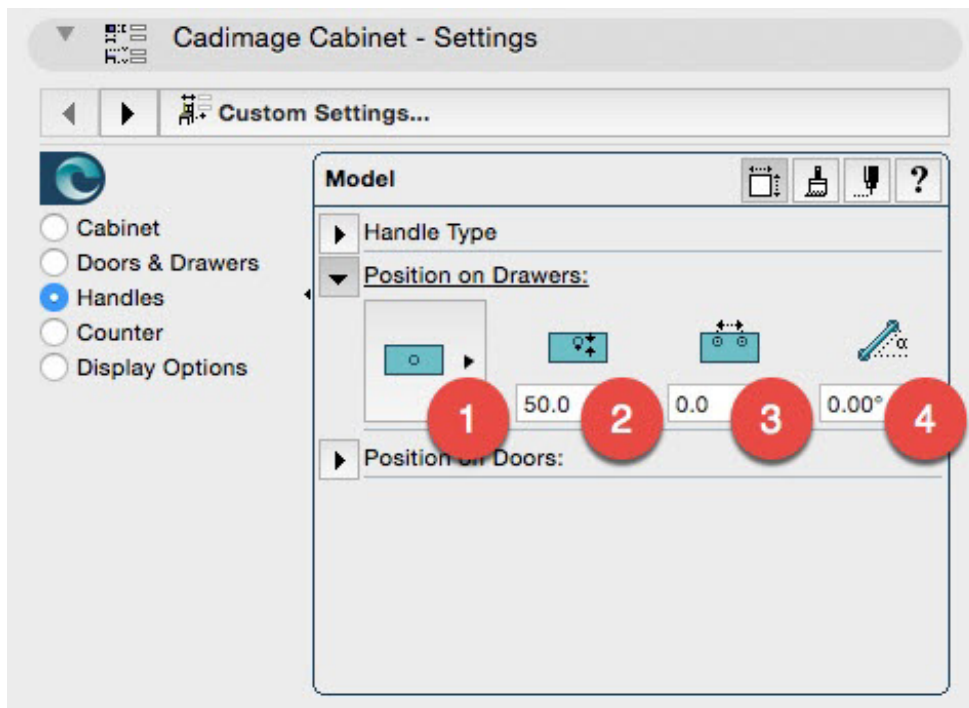

The positioning options for a *drawer* (shown above) are:

1. **Position on Drawers** which can be **Top, Centre or None**
2. **Offset Up**
3. **Separation** (if you want two handles)
4. **Rotation Angle**

The positioning options for a *door* (shown below) are:

1. **Position on Doors** which can be **Top, Bottom or None**
2. **Offset Down**
3. **Offset from Door Edge**
4. **Rotation Angle**

